




101 – 1601 Buffalo Place
Winnipeg, MB
R3H 1B5

BATHING DEVICES THAT CAN BE USED IN BATHTUBS


RIGID SEAT [Water Powered]

- Rests evenly on four rubber feet or suction cups on bottom of tub (dry surface)
- Is connected by hose to taps/nozzle
- Turn taps on to fill tub with water
- Open shower knob
- To operate seat of bath lift:
 - to raise seat turn bath lift knob backward
 - to stop seat turn bath lift knob half way
 - to lower seat turn bath lift knob forward
- After bath, when finished and out of tub, close shower knob, turn off water, and drain tub.
- Note * to use shower, push button up top *

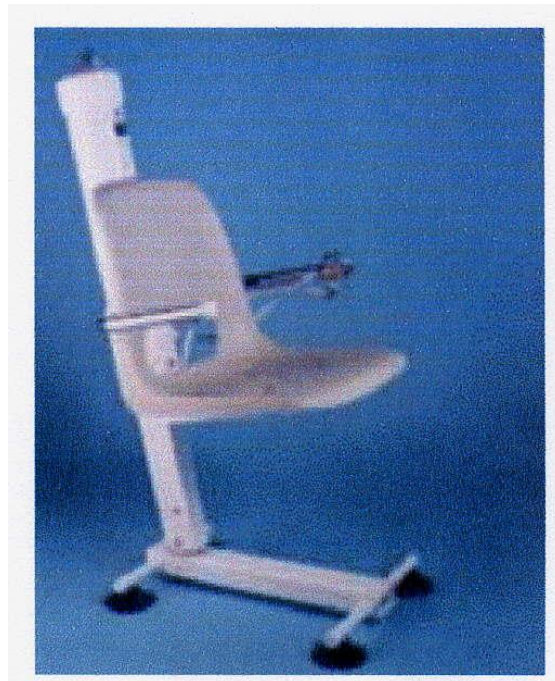

STRAIGHT OR RECLINING STYLE [Battery Powered]

- Rests evenly on four rubber feet or suction cups on bottom of tub (dry surface)
- Ensure that drive mechanism is securely attached to base
- Cover is on unit at all times
- Press **UP** on hand control to raise seat level with the edges of the tub
- Side flaps should be level and rest on edge of the bathtub
- Client or HCA fills tub with water and checks temperature
- Client sits on side flap resting on nearest edge of tub
- Client slides back until sitting in middle of seat
- Client turns, lifting one leg into the tub and then the other
- Once client is seated correctly, client presses **DOWN** on hand control
- To get out of the tub, client presses **UP** button and reverses procedure
- Only press the red Emergency stop button in the case of an emergency

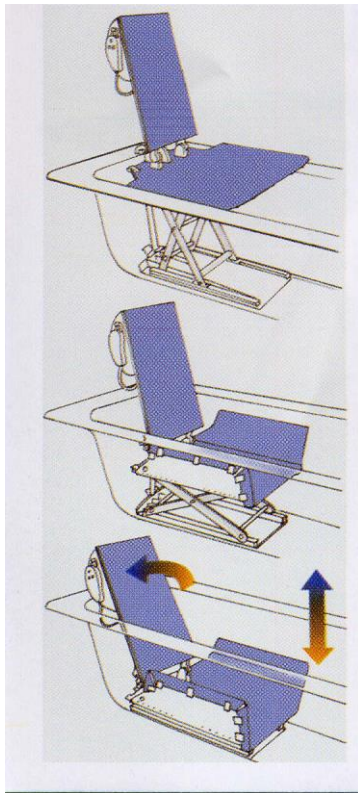

After bath, drain water from tub and take battery out of the guide and recharge it – i) unlock battery by pulling grip up slightly and pull it upwards out of the guide ii) insert jack plug of the charger into the socket of the battery, iii) insert power plug of the charger into the power socket, iv) red indicator lamp on charger stays on until battery is fully recharged, v) pull charger out of the power socket, and vi) disconnect the jack plug of the charger from the battery socket.

To clean tub, after battery removed, fold side flaps on the seat inwards, hold head end of backrest and fold it all the way forward, but watch – do not allow curled cable of hand control to get caught. The locking mechanism between base plate & seat plate closes automatically. Release both rear suction cups at the same time by pulling on the straps. Lift the rear end of the seat further; this releases front suction cups. [If height adapters have been added to unit, the front suction cups will also have straps that will need to be pulled up.] Unit weighs 11.7 kg or 25.74 lbs.

To clean unit, remove covers and wash in the washing machine at maximum 60°C using mild detergent. Be very careful when cleaning around lifting scissors under & beside seat. Wash frame using a commercial detergent or disinfectant, a cloth or brush, rinse with warm water and dry with a cloth. [Do not use abrasive cleaning agents.] Lightly grease the track using Vaseline.